# ERIE RAILROAD COMPANY

EASTERN DISTRICT

Delaware Division

Time Table No. 31

Effective 12:01 A. M.

SUNDAY, APRIL 30, 1944

FOR EMPLOYES ONLY

EASTERN STANDARD TIME

31
THINK!
THEN
SAFELY

- P. M. DONNELLAN, Superintendent
- M. G. McINNES

  Assistant General Manager
- R. C. RANDALL, General Manager

# TABLE SHOWING RATE OF SPEED REQUIRED PER MILE TO EQUAL A GIVEN NUMBER OF MILES PER HOUR.

TOWN RETURNED WERE

Time per Mile.		Time Miles Time per per Mile.		Miles Time per Heur. Mile.		Miles per Hour.	Time per Mile.	Miles per Hour.
0 min. 0 " 1 " 1 "	51 sec. 55 " 0 " 5 " 12 "	70.59 65.45 60.00 55.38 50.00	1 min. 20 sec.  1 " 30 "  1 " 42 "  2 " 0 "	45.00 40.00 35.29 30.00	2 min. 11 sec. 2 " 24 " 2 " 40 " 2 " 0 "	27.48 25.00 22.50 20.00	3 min. 25 sec. 4 " 0 " 4 " 48 " 6 " 0 "	17.56 15.00 12.50 10.00

# COMPANY SURGEONS

So far as New York State is concerned, this notice applies to employes in Interstate Commerce only

LOCATION	NAME	OFFICE	TELEPHONE	RESIDENCE	TELEPHONE
Port Jervis Port Jervis Port Jervis Callicoon Hancock Deposit Susquehanna Susquehanna	Dr. G. E. Kenny Dr. E. G. Cuddeback Dr. Edw. J. Walter (Oculist) Dr. Geo. R. Mills Dr. F. M. Woolsey Dr. C. M. Axtell Dr. W. J. Condon Dr. R. C. Davis	114 Pike St. 21 East Main St. 157 West Main St. Callicoon Hospital West Main St. 195 Front St. Odd Fellows Block 207 Main St.	No. 377  " 6 " 76 " 71 " 14 " 51 " 222 " 249	154 East Main St. 21 East Main St. 157 West Main St. Church St. West Main St. 195 Front St. 425 Grand St. 505 Broad Ave.	No. 113  " 6  " 76  No. 122  " 14  " 51  " 239  " 124-R-4

# SPECIAL INSTRUCTIONS

RULES OF THE OPERATING DEPART-MENT EFFECTIVE JULY 1, 1930.

## STANDARD CLOCKS.

S R Tower

#### TIME TABLES.

Trains operating over another railroad will be subject to the rules, special instructions and timetables of that railroad.

#### FLAG STOPS.

Trains scheduled to make flag stop at stations where no employe is on duty to give the necessary signal will approach such points prepared to stop and will come to a full stop if there are any persons on the platform.

# SIGNS. Additional to Rule 6.

- D. Day Train Order Office.
- N. Day and night Train Order Office.
- \* Conditional stop:

No. 1 will stop at Cochecton and Lordville June 19th to September 1st inclusive; Mondays to Fridays to discharge passengers from New York. During period June 24th to September 2nd inclusive, will stop at Narrowsburg, Callicoon, Hancock and Deposit on Saturdays and Sundays only to receive passengers for Susquehanna and west and to receive and discharge U.S. Mail. Regular stop on other days.

No 2 will stop at Lordville except Saturdays and Sundays, June 24th to September 2ndinclusive, to receive passengers for New York. Stop at Deposit, Hancock, Callicoon and Narrowsburg, Saturdays and Sundays June 24th, to September 2nd inclusive; also Tuesday, July 4th and Monday, September 4th only to discharge passengers from Susquehanna and west, and to receive and discharge U.S. mail. Regular stop on other days.

No 5 will stop at Narrowsburg to discharge passengers from Ridgewood and east.

No. 5 will not stop at Susquehanna station.

No. 6 will reduce speed to 20 miles per hour at Susquehanna, Deposit, Hancock and Callicoon, to discharge U. S. mail and newspapers.

No. 6 will not stop at Susquehanna station.

No. 7 will reduce speed to 30 miles per hour at Cochecton to discharge U. S. mail, No. 7 on Sundays will reduce speed to 30 miles per hour at Mill Rift. Lackawaxen, Mast Hope, Cochecton and Long Eddy to discharge papers when instructed by the conductor.

No. 8 will not carry baggage, mail or express.

No. 9 will stop at Parkers Glen, Westcolang Park and Skinners to discharge passengers from New York.

No. 11 will not carry passengers.

No. 12 will not carry passengers.

No. 27 will stop at Sparrowbush, Mill Rift, Pond Eddy and Lordville May 26th. to September 2nd. inclusive; to discharge passengers from Paterson and east.

No. 28 will stop on signal at Tusten to receive passengers, and at Parkers Glen and Mill Rift to take on passengers for Paterson and east.

No. 34—Sundays only, July 9th to August 27th. inclusive; also Tuesdays, May 30th and July 4th, and Monday. September 4th and will stop at Sparrowbush to take on passengers for New York.

No.38—Sundays only, July 9th to August 27th inclusive; also Tuesday, July 4th and Monday, September 4th and will stop at Parkers Glen and Sparrowbush to take on passengers for New York.

No. 43—Saturdays and Sundays only, June 24th to September 3rd. inclusive and will stop at Long Eddy to discharge passengers from Port Jervis and East.

No. 44 - Saturdays and Sundays only, June 24th to September 2nd., inclusive. also Tnesday, July 4th and Monday. September 4th, and will stop at West-colang to take on passengers for New York.

No. 45—Saturdays only, July 1st to September 2nd inclusive; and will stop at Long Eddy to discharge passengers from Port Jervis and east.

#### CLASSIFICATION SIGNALS.

The display of two white flags and two white lights as required under Operating Rule 21, will be omitted in single track territory where no trains are scheduled and in double or multiple track territory.

Operating Rule D-19 is amplified as follows:

Yellow or green lights to the front and side and red lights to the rear must be displayed before a train fouls the main track on which the current of traffic is in the direction the train is moving.

RULES FOR THE OPERATION AND SUPERVISION OF AIR BRAKE, STEAM HEAT EQUIPMENT AND CAR LIGHTING SYSTEMS, EFFECTIVE 1931.

Running tests provided for in Rule 525 will be made before descending grades as follows

Eastward---Gulf Summit

Westward---Gulf Summit

SPEED RESTRICTIONS.	Miles Per Hour
Miles Per Hour	Class R-1 and R-2 engines handling passenger, ex-
Passenger trains on unrestricted track 50	press, milk or freight trains 40
Freight trains 40	Class N-2 and R-3 engines, except engines 4212 and 4219, handling passenger, express or milk 50
Eastward trains handling 6000 ton or over between Gulf Summit and Deposit	J-2 Engines handling trains
Spreader cars will be restricted to a speed of thirty (30) miles per hour and will be handled with blades in trailing position	Loaded cars, carded Form 5432 30  Freight trains handling loaded self-clearing hop-
Light engines or with cabooses only, are restricted to 15 miles per hour below the permissible speed when handling a train, with a maximum of 35 miles	per cars (except covered hopper cars and series 37000) and freight cars with six wheel trucks, 30  Trains hauling dead engines
per hour.	
Engines must not be operated backward at a speed to exceed 15 miles per hour on curves, over grade crossings or through crossovers, and must not exceed 25 miles per hour at other points. Engines must not	Conductors will notify engineers before leaving terminals, whether or not such equipment in train and engineer will not leave terminals until so notified.
be operated backward beyond a point where a turn table or wye is located without special authority from the Superintendent. Engines without engine trucks must not be operated to exceed a speed of 15 miles per	All trains entering or leaving sidings or yards, passing from double to single or single to double track, or through crossovers except as otherwise provided
hour.	Traffic route crossover, JA Lanesboro, 25
Cars having shipments with maximum gross weight of car and lading in excess of 260,000 Lbs, with four	Crossovers TU Tusten
axles, and 300,000 Lbs. with six axles, will not be operated except by special instructions.	Crossovers BQ Lackawaxen
Susquehanna Coach Shop, Track leading to Whiting jack, and all circle tracks from main lead to Motor Car Shop, back to and including track 17, are restricted to all except "C" and "B" class engines.	J-2 engines must not operate over Conley frogs.  Class R-1 and 2 and S type engines will not exceed a speed of twenty (20) miles per hour over bridge: 90.84 Delaware River—Mill Rift.
Class C, K 2, K 2A, K 4, K 4B, K 5, K 5 A, K 5B, N and R 3 engines will not operate in excess of 15 miles per hour over bridge 191.24, Exchange Street, Susquehanna westward yard, on tracks 4,5,6,7,8 and	Class S-4 engines will not exceed a speed of twenty (20) miles per hour over the following bridges:  Bridge 175.53 Delaware River Deposit
boiler shop track south of the eastward main track.	192.06 Susquehanna RiverSusquehanna
Class R-1 and 2 engines and all classes of S engines must not operate over bridge 191 24, Exchange Street, Susquehanna, westward yard on tracks 4, 5, 6,	Port Jervis Station to bridge 90.84, Mill Rift, eastward and westward tracks
7, 8 and boiler shop track south of the eastward main track.	Over switches at Germantown bridge, Port Jervis yard, except diverging movement
Cars having shipments with maximum gross weight of car and lading in excess of 200,000 Lbs. with four	Diverging movements, Sparrowbush
axles and 225,000 Lbs with six axles are restricted to 15 miles per hour over bridge 191.24, Exchange Street Susquehanna, westward yard, on tracks 4, 5, 6,	Curve 4, Mill Rift, M P. 90.92 to M. P. 91.26, eastward and westward tracks 40
7, 8 and boiler shop track south of the eastward main track.	Curves 17 and 18, east of Rosas, M. P. 94,71 to M. P. 95.29, easwtard track
Eastward trains when using westward track at west end "OZ" siding	Curves 20, 21, 22, 23 and 24, east of Rosas, M.P. 95,51 to M.P. 96,57, eastward track 45
TIMES DESIGNIES WICCELLES GCITTON	Curve 31, Pond Eddy, M. P. 98.47 to M. P. 98.75,
Trains handling 8-wheel swivel truck craues, steam shovels and other similar pivoted machinery 30	eastward and westward tracks

Curves 37 and 38, west of Pond Eddy, M.P. 10044 to M. P. 100.87, eastward and westward	M.P.167.69 to M.P. 168.06, eastward and west- ward tracks
tracks	Deposit and Gun Summit, Westward
Curves 46, 47 and 48, west of Parkers Glen, M.P. 102.30 to M.P. 103.13, eastward and westward tracks	Curves 226 and 227, east of Gulf Summit.
Curve 52, west of OZ Siding M. P. 103.86 to	M.P. 182.41, to M. P. 183.07, eastward track 45
M. P. 104.26, eastward and westward tracks  Curve 56, east of Shohola, M. P. 104.81 to	Curves 243, 244, 245, 246, 247 and 248, Starrucca Viaduct and west, M. P. 189.33 to M. P. 191.78
M. P. 105.10, eastward and westward tracks	Westward track
M. P. 105.64, eastward and westward tracks	45 Apex grade at Gulf Summit 10
Curve 60, Shohola, M. P. 105.64 to M. P. 106.09 eastward and westward tracks	Between Lanesboro and Gulf Summit, eastward track
Curves 66 and 67, east of BQ, Lackawaxen, M. P. 107.52 to M. P. 107.99, eastward and	R and S engines, over Starrucca Viaduct, east- ward and westward tracks
westward tracks	Brakes will not be applied or speed changed on
Curve 96, Tusten, M. P. 117.83 to M. P. 118.02, eastward and westward tracks	Starrucca Viaduct except in case of emergency.
Curve 104, east of Narrowsburg, M. P. 121.08 to M. P. 121.48, eastward and westward tracks	Curves 245, 246, 247 and 248, Susquehanna and east, M. P. 189.98 to M. P. 191.78, eastward track
Curves 105, and 106, west of Narrowsburg, M.P.121.57 to M.P. 122.72, eastward and westward tracks	Curve 250, Susquehanna, M. P. 191.88 to M. P. 192.10, eastward and westward tracks, 30
Curve 118, Skinners, M.P. 127.23 to M.P. 127.60, eastward and westward tracks	Coaling Station Susquenanna, eastward and west- ward tracks
Curve 122, Cochecton, M.P. 130.06 to M.P. 130 59, eastward and westward tracks	R and S Type Engines must not operate over the fol- lowing tracks:
Curves 136 and 137, west of Callicoon, M.P. 139 12 to M.P. 139.80, westward track	Hill track leading to Coal Pockets.
Curves 145 1-2 and 146, west of Hankins, M.P. 143.36 to M.P. 143.80, eastward and westward tracks	Wrecking track. Track No. 15, westward yard. All tracks south of eastword main track between
Curve 163, east of Lordville, M. P. 150.61, to	Stock yard track SQ stub yard tracks.
M. P. 151.18, eastward and westward tracks Curve 168, west of Lordville, M. P. 153.33, to	LANESBURU, PA.
M. P. 153.82 eastward and westward tracks	
Curve 173, east of Stockport, M. P. 156.22, to M. P. 156.58, eastward and westward tracks	DEPOSIT, N. Y.  Oquaga Milk Switch, from a point 440 feet beyond
Curve 180, east of Hancock, M. P. 161.07, to M. P. 161.28, eastward and westward tracks	point of switch to end of track.  Woodshed track.  Hinmans switch.
Curve 183, Hancock, M. P. 162.73, to M.P. 163 00, eastward and westward tracks	Creamery switch. Stock yard track MX.
Curve 186, west of Hancock, M. P. 163.88 to M. P. 164.09, eastward and westward tracks	HALE EDDY, N. Y.
Curves 189, 190, 191 and 192, west of Hancock,	HANCOCK, N. Y.
M. P. 165.27 to M. P. 166.33, eastward and	Pipe line switch. Station switch.

LORDVILLE, N. Y.

Stockport switch.
Stone Dock switch

LONG EDDY, N. Y.

Station switch.

Acid factory switch.

HANKINS, N. Y.

Station switch.

CALLICOON, N. Y.

Crusher switch Hill track

COCHECTON, N. Y.

Station switch.

LACKAWAXEN, PA.

Wye track.

POND EDDY, PA.

Station switch.

R and S engines must not be operated backward through turnout, west end OZ westward siding.

# SUPERIORITY OF TRAINS.

Eastward trains are superior to westward trains of the same class, except as otherwise provided.

#### CLEARING OF TRAINS.

First class trains will not leave Port Jervis without clearance (Form A)

First class and extra trains originating at Deposit will not leave without clearance (Form A).

First class trains scheduled to stop at Susquehanna station will not leave Susquehanna without clearance (Form A.)

Eastward freight trains will obtain permission from Train Dispatcher before departing east yard Susquehanna.

#### TRAIN REGISTERS.

Susquehanna Telegraph Office First class trains originating and terminating at Susquehanna.

Deposit..... Telegraph Office First class trains originating and terminating at Deposit.

Port Jervis... Telegraph Office First class trains

Trains not scheduled to stop at points at which Train Registers are located, may register by throwing off train register slip, except when displaying signals for a following section when trains must stop and the conductor register the train in person.

When registering trains, write out in full the color of signals displayed.

When not displaying signals write out in full "no signals," sign name and initials; do not use ditto marks.

It will be the duty of the employe in charge of the register station at points where trains are authorized to throw off train register slips to enter the information on the train register and preserve the slip.

#### SPECIAL ORDER BOOKS and

#### BULLETIN BOARDS.

Susquehanna	New Coalir	raph Office Terminal Offi ig Station Off ower	The state of
Deposit		e Foreman's	Office
Port Jervis	{ Telegra	aph Office Dispatcher's	s Office
SIDINGS.	Car (	Capacity	
	Eastward	Westward	
O Z Callicoon Hancock	130	131 125 135	
M X	96	81	
Gulf Summit	124		

#### CROSSOVER MOVEMENTS.

When necessary to enter upon main tracks or cross over from one main track to another, permission will first be obtained, except in Susquehanna and Port Jervis yards.

Exception to this rule as follows:

It will be necessary to obtain permission before crossing over at:

Creamery crossover......Susquehanna

This does not relieve enginemen and trainmen from protecting the movement as per Rule 99.

Permission to use main tracks or crossover operated by interlocking plants will be given by signal indications.

#### YARD LIMITS. Indicated by Signs.

Susquehanna

Port Jervis

#### RULE 93-A.

Movements may be made against the current of traffic through the following yard limits by train orders and further protection under Rule 93-A need not be afforded west of WX Tower, Port Jervis yard,

#### "SPRING SWITCHES"

Switches at west end of "CO" westward siding, Callicoon and Bridge No. 1 at Susquehanna Yard are equipped with spring stands, set normal for main track movement. Trains or engines may pull out of these sidings to main track without opening or closing switches by hand, except at Bridge No. 1, Susquehanna Yard, at which point employes receiving permission to enter westward main track at pull out from westward yard, will open spring switch by hand and leave open until engine or train has entered circuit, on yard lead, then close spring switch by hand and proceed through switch.

Caution must be taken to prevent backup movement, slack running out of trains, or taking slack over spring switches before forward movement is completed. If necessary to make such movements, switches must be opened by hand

When switching over these switches they must be hand operated.

The spring switches are protected by Dwarf signals for trains operating against the current of traffic, as follows:

Clear indication, proceed over spring switch, approach indication, proceed to point of switch, then stop, examine points of switch and make sure points are properly set before proceeding. If found out of order, use hand throw switch and restore to normal position after using and immediately report same to the Superintendent.

Trains moving against the current of traffic on clear indication will proceed over spring switches not to exceed 20 miles per hour.

# MOVEMENTS NOT PROVIDED BY TIME TABLE.

In double track territory between Susquehanna and Port Jervis extra trains, except passenger extras, will proceed without train orders.

Eastward freight trains when in the time of westward passenger trains, must regulate the speed or if necessary stop so that engine will not be on Starrucca Viaduct, bridge 189.46, east of Lanesboro, while passenger trains are passing over same.

While engines of K, N, R and S class are using one track on Starrucca viaduct bridge 189.46 east of Lanesboro, no other engine of these classes will be allowed on opposite track on viaduct

# TRAFFIC ROUTE CONTROL DISTRICTS.

Eastward and westward tracks between TU Tusten and BQ Lackawaxen, also westward track between JA Lanesboro and GF Gulf Summit are equipped with Traffic Route Control. Trains and engines may proceed on proper signal indications, without regard to train or time table rights against opposing trains or following superior trains, as per Rule D-261 Rules of the Operating Department. It is forbidden to accept the proceed indication if there is any known cause that will prevent making usual running time. When a train accepts the proceed indication and for any cause is unable to make usual running time the train must be protected as prescribed by Rule 99.

# RULES GOVERNING MANUAL AND CONTROLLED MANUAL BLOCK SYSTEMS, AUTOMATIC BLOCK SYSTEMS AND INTERLOCKING.

Effective July 1, 1930.

Between Susquehanna and Port Jervis, automatic block signal rules will govern.

Trains operating in Automatic Block Signal Districts governed by Telephone Train Order Signals may run with the current of traffic, upon signal indication, which signal indication supersedes time table superiority as per rule D-251, Rules of the Operating Department.

# TELEPHONE TRAIN ORDER SIGNALS.

Westward.

Auto. Sig. 102-1 O Z Siding

128-1 Pages

161-1 KI Siding Hancock

169-1 HF Crossover Roods Creek

174-1 MX Siding

#### Eastward

175-2 MX Siding

169-2 HF Crossover Roods Creek

162-2 KI Hancock

136-2 CO Siding

129-2 Pages

103-2 O Z Crossover


87-2 Pert Jervis

Rule 509-D, paragraph (b) Rules of the Operating Department, is amplified as follows:

When telephone train order signals are set at 45 degrees above horizontal, or yellow light, indicating that train should take siding and siding cannot be used, or there is no siding, making it necessary to back train over to opposite track, signal may be passed without first bringing the train to a stop and may proceed at restricted speed until the rear of the train clears the crossover. After permission has been re

ceived from the Train Dispatcher or Signalman in charge, the train may back over to the opposite track, protecting the movement as prescribed by Rule 99.

Position Light Telephone Train Order Signal. A position light unit attached to pole below upper unit.

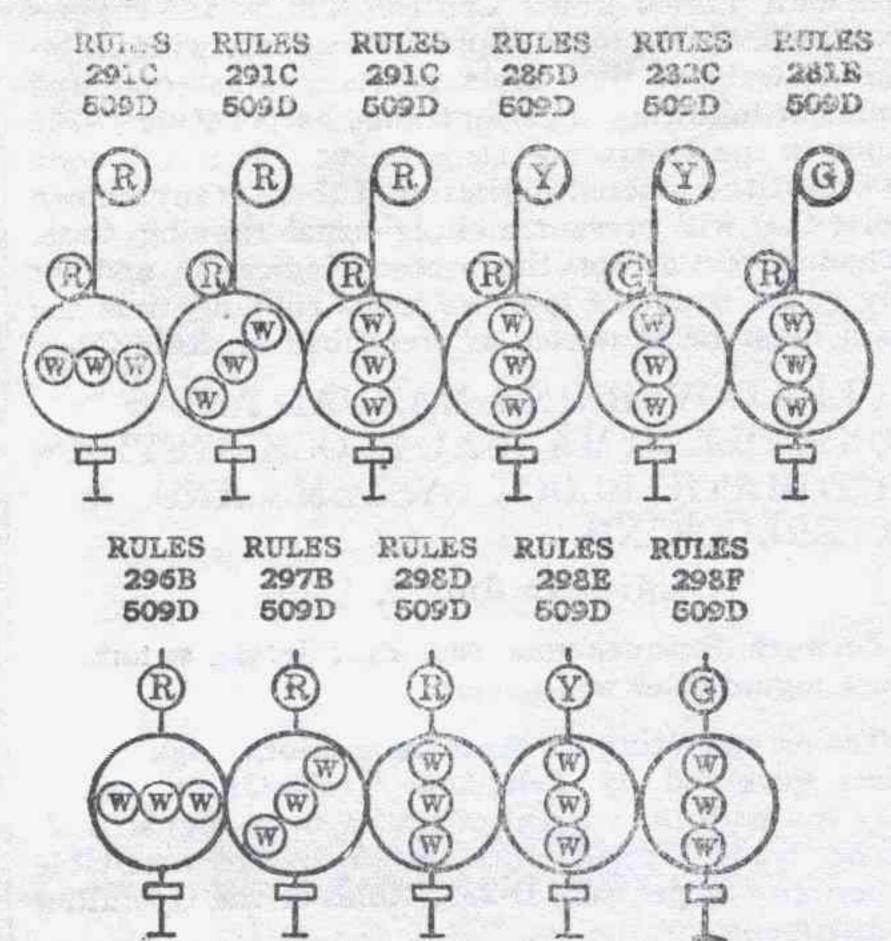

Where position light telephone train order signals are in service Rules 509b, 509c and 509d will be observed the same as where other types of signals are in use. POINTS WHERE INTERLOCKING SIGNALS ARE USED AS TRAIN ORDER SIGNALS.

See Rule 221A, Rules of Operating Department, effective July 1, 1930 and revised February 15, 1937.

W X Tower Sparrowbush.

B Q Tower Lackawaxen for trains via main line and eastward trains from Wyoming Division.

J A Tower Lanesboro

S R Tower Susquehanna

#### RATING FOR ORDINARY TRAINS.

Train tonnage will be determined by the Chief Train Dispatcher. Trains will be given maximum rating unless otherwise directed.

HOURS DURING WHICH DAY OR NIGHT TRAIN ORDER AND BLOCK OFFICES ARE IN OPERATION.

Hancock 7.00 A. M. to 5.00 P. M. and 6.00 P. M. to 8.00 P. M.

Sunday 11.00 A. M. to 5.00 P. M.

6.00 P. M. to 8.00 P. M.

#### MISCELLANEOUS.

When a car is set out of a train, at any point on account of a hot journal, trainmen will extinguish fire before leaving the car.

#### OVERHEAD CLEARANCES

Employes are warned of close overhead clearance of less than 21 feet and must not go on top of box cars, engines or other high equipment while movements are being made under these bridges and structures located as follows;

#### SUSQUEHANNA, PA.

Coaling station—Eastward and westward tracks, eastward and westward sidings.

High-tension cable crossing over Coal track. Shed over unloading coal hoppers—Hill track.

All tracks entering shop buildings in coach shop yard and new engine terminal.

# DEPOSIT, N. Y.

Freight House.

Shed at Delaware Mills plant.

Wires crossing at Delaware Mills and Bordens Plants

Wire crossing over coal unloading track. Wilcox Coal Co. Shed.

## COCHECTON, N. Y.

Wires crossing station switch.

## NARROWSBURG, N. Y.

Bridge H-121.71 eastward and westward tracks. Wire crossing Narrowsburg Lumber Co. track.

# OVERHEAD SIGNAL LINE CONDUCTOR CLEARANCE.

The clear space between the lowest signal line conductor and the surface of track rails at the following locations is less than 27 feet. Employes must not ride on top of freight cars at these locations:

#### HANCOCK, N. Y.

M. P. 163.12 over both main tracks.

M. P. 163.06 " storage track west of freight house.

M. P. 162.74 " both main tracks.

#### TUSTEN, N. Y.

M. P. 117.73 Over both main tracks.

# LACKAWAXEN, N. Y.

M. P. 110,20 Over both main tracks

#### AUTOMATIC TRAIN CONTROL.

Train control device is in service at all signals governing main line movements on the Delaware Division, commencing at westward automatic signal 89-1 located east of WX Sparrowbush up to and including westward home signal at SR Tower and from eastward home signal at SR Tower, up to and including eastward home signal at WX Sparrowbush.

Controlling inductors are located approximately 70 feet in the rear of each signal.

Train control device is in service on westward track between Gulf Summit and SR Tower and on eastward track between Gulf Summit and MX eastward siding to protect backup movement.

The train control inductors located at signals between points mentioned above will be painted white, and at the inductor, yellow reflector lens facing west, between Gulf Summit and SR Tower and facing east, between Gulf Summit and MX siding will be mounted on a post between the eastward and westward tracks to designate the location of inductors to enable enginement to acknowledge when running against the current of traffic.

Open inductors are in service on engine dispatching tracks at Port Jervis, Deposit and Susquehanna; enginemen are required to take brake application passing over the first of these inductors and to acknowledge passing over the other.

Engines not equipped with Automatic Train Control, or with such device not in working order, will not be handled over train control territory except under following restrictions:

1. Double-headed behind an engine, the train stop device of which is in working order.

2. Dead in freight train.

- 3. When train control device fails between terminals, seal will be broken on cut out cock, train control device cut out and report will be made to Superintendent at first point of communication and train will proceed in accordance with instructions received. In the event prevailing weather conditions interfere with visibility of signals, trains will proceed under caution from point where device fails to point of communication with Superintendent.
- 4. Crews of engines of foreign lines handling detoured trains between points intermediate to division terminals, under protection of Erie pilot, will be governed by instructions of Superintendent as to extra precaution to be taken to safeguard movement.

All defects in the apparatus must be reported on regular work Form 1404.

## INSTRUCTIONS FOR ENGINEMEN STARTING UP

To latch up Actuator and Brake Valve Rotary: First, Headlight generator must be running; second, main reservoir must be pumped up; third, reset button must be depressed for two seconds; fourth, brake valve handle must be moved to full service position, thus latching up handle to rotary valve.

#### ACTUATOR

The Actuator is controlled automatically. The G. E. Stuart, rotary in the brake valve moves to service position O. A. Carey, only when an automatic application is received, but P. J. Gallagher,

the brake handle does not move. The enginemen, however, can manually go from service to emergency. When an automatic application has been received, the train will come to a stop. It will then be necessary for the engineer to get down from the engine and press the reset button located on the right hand side of tender frame, for two seconds, and release. This will reset the system and indicator on top of actuator will again go to the reset position, arrow pointing to "R".

It is then possible for the engineer to relatch the brake valve handle with the rotary valve by moving the brake valve handle to the service position, which is the relatching position. He can then put the brake

valve in any position desired.

#### BROKEN AIR PIPES

If pipe on actuator cylinder is broken or leaking, plug it. It will then be necessary to break seal and raise seal cock handle to cutout position.

When air pipe to whistle valve breaks, same should be plugged and train control not cut out.

#### ACKNOWLEDGING CONTACTOR

When required to acknowledge, acknowledger handle must be pulled down before passing a signal displaying other than "Proceed." If held down more than fifteen seconds, an automatic application will result. Acknowledger handle must be released when whistle stops blowing or inductor has been passed.

Failure of acknowledging whistle to blow while acknowledging should be reported on Form 5322-A.

Enginemen must not acknowledge until after signal ndication has been observed and is being obeyed.

#### CONTROL CUTOUT COCK

This is connected under left-hand actuator cylinder and is only to be used in case of failure of apparatus to admit air to left-hand actuator cylinder. This cuts in train control when in the horizontal position of handle. To cut out control raise handle.

#### LIGHT DEFECT

With train control in service and a short occurs on the light circuit it causes a drop in voltage until fuse on light circuit is blown, which, as a rule, will cause an application of the brakes. If such occurs, engineman will push button which will develop the condition of generator and automatic stop circuit, and if both prove to be in working condition, engineman will proceed without cutting out automatic train control.

#### DEFECTS OR FAILURE OF APPARATUS

These shall be reported on regular engineer's defect form 5322-A. Improper applications at clear signals or other points should be reported at first telegraph office.

C. P. Shaughnessy, Chief Trainmaster

R. H. Lewis, Trainmaster

J. P. Hogan, Chief Train Dispatcher

G. E. Stuart, Assistant Chief Train Dispatcher
O. A. Carey, Assistant Chief Train Dispatcher

O. A. Carey, Assistant Chief Train Dispatcher
P. J. Gallagher, Assistant Chief Train Dispatcher

1000 AND 100 IN		THE PARTY AND THE PARTY AND ADDRESS AT THE	T 40 70 T
TET.A	AND THE BY	DIVIS	11 6 3 10
All the state of t	مقاه کا خالہ دائے۔	A william W william Daniel	Alle Sull Alle

					EASTV	WARD TI	RAINS			
e e	STATIONS		ATT 124	FI	RST CLA	NS -			Land C	
Distance from Susquehanna	AND	10	6	12	28	44	2	34	38	8
La Af all	SIDINGS	Daily	Daily Note	Daily Except Monday	Daily Note	Saturday and Sunday Only Note	Daily Note	S unday Only Note	Suaday Only Note	Daily
A STATE		A. M.	A.M.		P.M.	P. M.	P.M.	P.M.	P.M.	A.M.
	NEW YORK A.	6.29	9.16	Gert at	7.09	7.34	7.54	8.39	10.54	1224
		A.M.	A. M.	A.M.	P.M.	P.M.	P.M.	P.M.	P.M.	P.M.
104.3	PORT JERVIS A.N	3.25	6.40	8.48	4.28	5.10	5.17	6.15	8.25	9.40
101.8	SPARROWBUSH	3.20	6.35	8.43	s 4.25		5.12		* 8.20	9.35
	MILL RIFT				* 4.20				s 8.15	
94.6	ROSAS	3.11	6.26	8.31	4.08	4.55	5.03	6.00	8.03	9.26
	POND EDDY									
	PARKER'S GLEN									
85.5	SHOHOLA					3 4.42				100
82.2	B Q TOWER N	2.55	6.10	8.11		4.34			The second secon	9.08
81.5	LACKAWAXEN					3 4.33				
78.5	WESTCOLANG	7.4				* 408	2		f 7.29	
	MAST HOPE			and the second	7.	4.20	6 au	2.71.21.22		
73.0	T U CROSSOVER	2.43		7.56	3.15	100	437	5.25	7 19	8.58
	NARROWSBURG		Annual Latin	s 7.50				THE RESERVE TO THE RE	THE RESERVE TO SECTION 1	
64.3	SKINNERS				s 2.55			an	f 7.04	
62.7	PAGES	2.25	5.41	7.33	2.52	103	1,90	5.08	7.01	8.45
61.7	COCHECTON				s 2.49		* 418		A THE RESERVE AND ADDRESS OF THE PARTY OF TH	COMPANIES COMPA
	CALLICOONN	s 2.16	5.34	s 7.25	s 2.33			s 4.57	Marine Marine	
49.6	HANKINS					s 3.39		7.5	4 6 4 1	
	LONG EDDY		provided the second sec						s 6.30	
39.0	LORDVILLE	1.50	5.10	6.58	s 1.55	s 3.21	* 3 1/5	s 4.25	8 6 2 7	8.17
28.6	HANCOCK D	s 1.37	4.57	s 6.45	s 1.39	s 3 ()5	s 330	s 4.10	s 6.06	8.04
20.5	HALE EDDY				s 1.13					
15.6	DEPOSIT	s 1.19	4.39	s 6.23	s 70%	2.45	s 3 13	3.50	5.45	7.47
	GULF SUMMIT			6.08					C11.000000	7.38
1.8	LANESBORO	12.54	4.14		12.26	NAME OF THE REAL PROPERTY.			THE REAL PROPERTY.	7.25
.0	SUSQUEHANNA LN	12.50	4.11		E-131 - 101 (1) (6)					7.21
2.2	S R TOWER	12.34	3.59		12.05					6.57
		A.M.	A.N.	Δ. Μ.	P. M.	P. M.	P.M.	P.M.	P.M.	P M.

		DEI	AWA	RE I	DIVIS	LON		والمسورة			
1				s páis	WESTW	ARD TI	RAINS				
	STATIONS	FIRST CLASS									
Distance from Jersey City	AND	7	11	1	43	9	45	27	5		
Dist	SIDINGS	Daily	Daily Except Monday	Daily Note	Saturday and Sunday Note	Daily Note	Saturday Only Note	Daily Note	Daily Note		
		P.M		A.M.	P.M.	A.M.	P.M.	P.M.	P. M.		
	NEW YORK L.	11.55		8.30	9.10	10.40	2.00	3.00	6.40		
		A. M.	A M	A.M.	A.M.	P.M.	P. M.	P.M.	P.M.		
	PORT JERVIS L.N				11.35	552					
THE PARTY OF THE P	7.5				f 11.40		av 17 B 12 VI	to the sale			
89.8	SPARROWBUSH										
97.0	5.8 ROSAS	2.47	7.24	11.24	11.52	2.14			9.42		
	POND EDDY			A CONTRACTOR OF THE PARTY OF TH	Carried 100 100 110 110 110 110 110 110 110 11		-				
1022	PARKER'S GLEN				f 12.01	* 229	f 4.48				
106 1	SHOHOLA				s 12.09	s 2.36	s 4.56				
109 /	B Q TOWER	3.02	7.39	11.39	12.14	2.42	5.01	6.13	9.57		
110.1	LACKAWAXEN				s 12.17	s 2.44	s 5.04	s 6.17			
113.1	WESTCOLANG				f 12.22	* 2.49	f 5.09				
115.4	T U CROSSOVER	2 1 2	7 5 1	11 //0							
118.6	NARROWSBURG	8 3 90	7.01	8 11 55	8 19 37	s 3.04	s 5.25	s 6.37	* 10.11		
127.3	SKINNERS						f 5.34				
128.9	PAGES	3.30	8.09	12.08	12.47	3.14	5.36				
129.9	COCHECTON			* 12.08	s 12.50	s 3.19	s 5.40		A CONTRACTOR OF THE PARTY OF TH		
135.1	CALLICOON	s 3.42	s 8.22	s 12.17	s 12.58	s 3.44	s 5.50				
142.0	HANKINS				s 1.08	s 3.55	s 6.02				
	LONG EDDY	The same of the same of					* 6.11				
152.6	LORDVILLE	4.04	8.44	* 12.40	s 1.25	s 4.17	s 6.20	* 7.30	10.52		
163.0	HANCOCK I	s 4.20	s 8.59	s 12.56	s 1.40	8 4.34	s 6.38	s 7.45	11.07		
171.1	MALE EDDY										
	DEPOSIT				3 2.00	s 5.03	7.00	s 8.04	11.25		
	GULF SUMMIT					A COURT OF THE PARTY OF THE PAR	9		A CONTRACTOR OF THE PARTY OF TH		
189.8	LANESBORO	5.04	9.42	A A SECURITION OF THE ABOVE VISION I	A THE PARTY OF THE		3				
191.6	SUSQUEHANNA A	5.06	9.45				?	A.			
193.8	8 S R TOWER	5.20	10.00	1.5	3	5.47	Y	8.45	12.02		
		A.H.	A. M.	P.M.	P. M.	P.M.	P.M.	P.N.	A.M.	1 2 8	

# TO MERCHANICAL SERVICE SERVICES

				AT ORA	SPIN NATED					
							estation			
	ě.	133	23		14.69					
										, Electric
				110	THE SECTION					
				BANK.		919				
		.8.5	3.4	3.3	3.12					
	3				0.5					
	de a de	200	10.004	1000						
6 - 210 - 192 eu	F.8.2	Olive,	Section 4	1,0,4	pale ki	41.14				
						\$50.14				
							,			
		60.0								
	You do									
	17/00/22	71.3	480.5							
le xxee			75.0	9. 6						
		**************************************								
	10.07	C 327 E							application of the second	
1 1 1	1.01			2000		11.5				
		Selve								
	10.21	6.58				ou.es				
					12.25				naking day a	
	08.0 bs	100 0	0:3		raina, L				accidituate A. N.	
			Section 1			Mark to the			SELDER BUTTER	
		deline.			DI.I					
	10.5%	96.2								
	10.33									
							-			
1.5%+ 54	2.2.4.1		SELT.						ar-in Todkan is	
10.550.0	2 Enlak		2						Len The State of	TABLE -
	Aller To Keny				No. Williams			4-0-4		48
	Viz. E3:11		seeset (				94.0		AND AND AND ADDRESS.	BAUT S
	75 U.S.S. 19	Gillion I		St. 2	Server.				A CHARLET I A	2006
		41	.E.1		7.4	2.0				
WHEN SHIP IN S					THE VEHICLE				HOREN DESIGNATION OF THE PARTY	1 (5) (-1)